

Installation & Assembly


Hook Engagement

Overview: The retaining portion of all Wall Control Slotted Tool Board hooks and attachments offer a unique “double offset” design. This design prevents the attachments from unintentionally falling out of the panel, yet still permits easy movement from slot to slot.


Please note that for **1/4” Pegboard Accessories** conventional engagement will still apply for the round holes. Simply place the pegs in the round holes and you’re done.

The required motion for **Slotted Hook Engagement** is shown below. A simple “Up, down, up, down” motion is all that is required to engage a slotted hook or accessory.


Step 1: Slip the upper portion of the rear tang through the slot in the panel in an upward motion as illustrated here

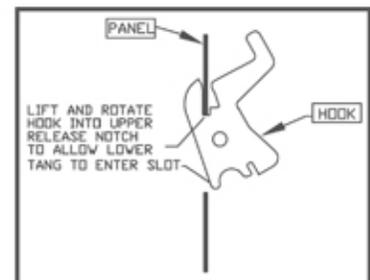


Step 2: Rotate the body of the tang into the slot and lower the hook so the rotation arc in the tang rests on the panel

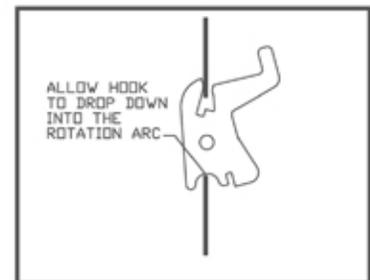

Step 3: Lift the hook and rotate the lower end of the hook toward the slot on the panel face

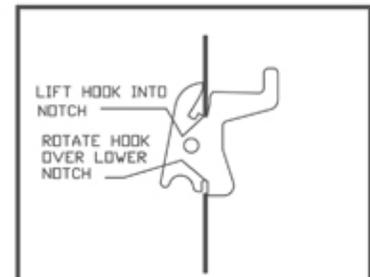

Step 4: Lower the hook until the positioning slot in tang is fully seated in the panel’s slot

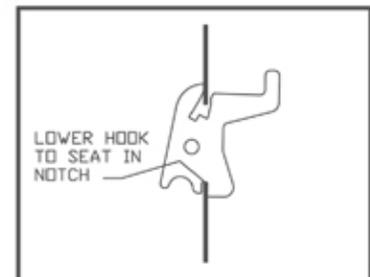

 facebook.com/WallControl

 pinterest.com/WallControl

1.888.792.5266

I

www.WallControl.com

For **Application Images** be sure to Follow WallControl on Pinterest & Like us on Facebook