



# V-BRACKET ASSEMBLY

**IMPORTANT:** Check components and read complete instructions before starting assembly !

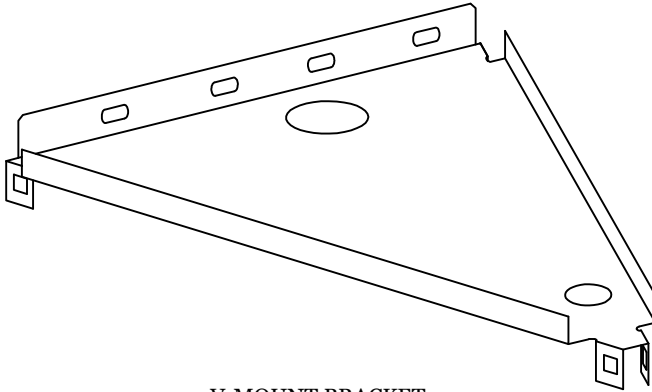


V-MOUNT BRACKET  
PN VBR-1616  
QTY (2)

The same bracket is used for Upper and Lower mounts.

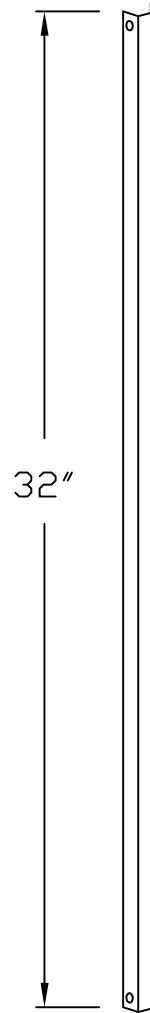

32" END TRIM  
PN VVC-0132  
QTY (1)

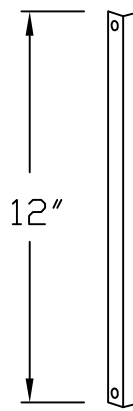

12" END TRIM  
PN VVC-0112  
QTY (1)

## IMPORTANT:

Your kit will contain the  
12" End Trim  
**OR**  
32" End Trim  
Depending upon which kit  
you have purchased.  
The kit does not contain both.

## FASTENERS



(8) Cage Nut #C7931-1024-4



(8) #12 Pan Head Wood Screw



(8) Plastic Anchor



(8) #10-24 x 5/8" Pan Head Machine Screw

# CAGE NUT INSTALLATION

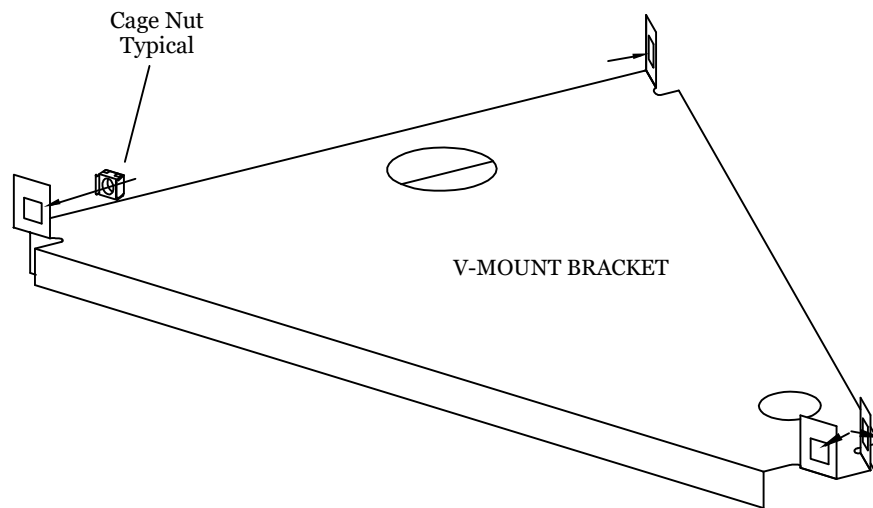


Fig. 1

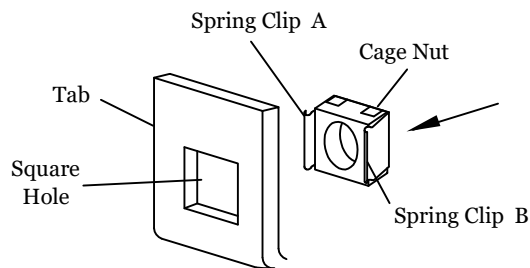


Fig. 2

## Step 1

( If Cage Nuts are pre-installed skip to Step #4)

Cage nuts need to be installed into the square opening in each of the (4) Tabs on the V-Mount Bracket. Cage Nuts install from the inside out with the spring Clips on the nut entering the opening first. Fig. #1 and Fig# 2

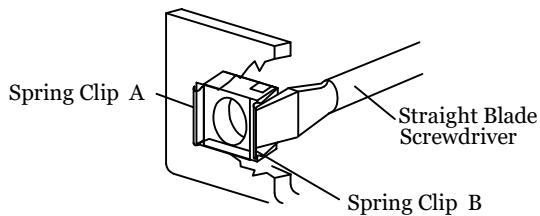


Fig. 3

## Step 2 (Suggest using gloves )

Enter Spring Clip A all the way thru the square opening. Place the blade of a small straight blade screwdriver in the back of Spring Clip B. Depress Clip B and push Cage Nut fully into the opening. Fig# 3

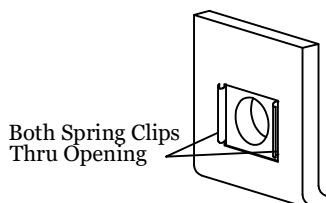


Fig. 4

## Step 3

When properly installed both spring clips will be extended thru the Tab. Nut should have some freedom of movement within the cage. Repeat installation on all (4) Tabs on both Mount Brackets. Fig.#4

# END TRIM ALIGNMENT

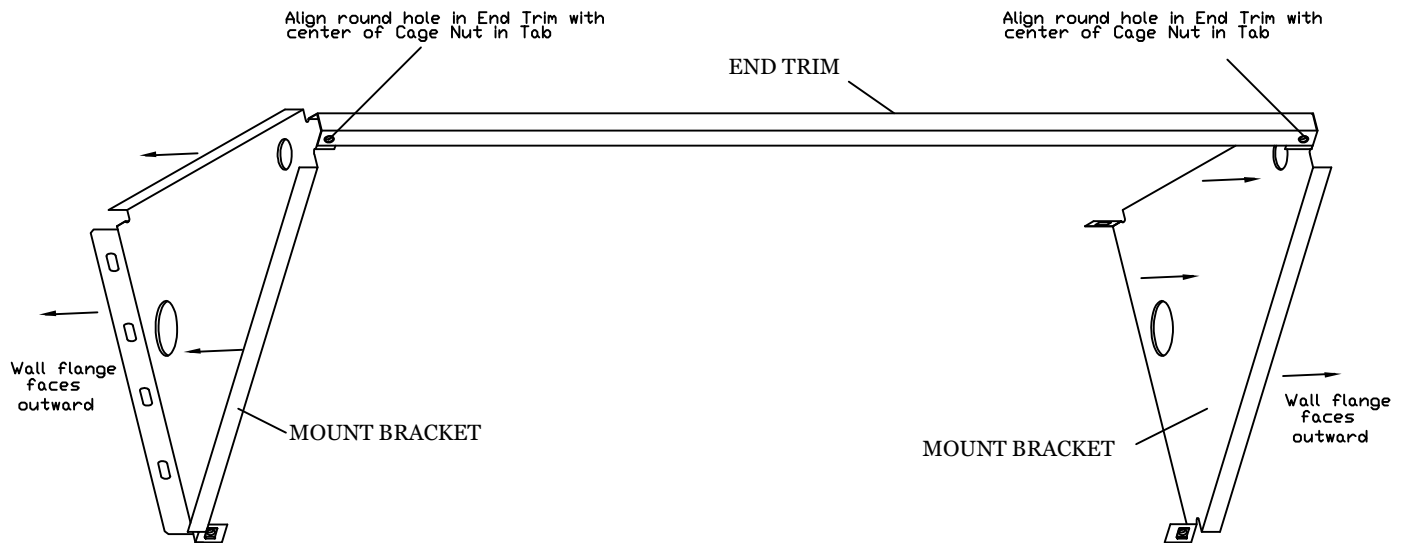


Fig. 5

## Step 4

Position Mount Bracket 32" apart (or 12" apart depending upon kit purchased) with the wall flanges against a flat surface (the floor or a workbench top work very well). MAKE CERTAIN THAT THE WALL MOUNT FLANGES ARE FACING OUTWARD. This will have the mount tabs with cage nuts facing inward.

Fig# 5

## Step 5

Position the End Trim over the ends of the (2) Mount Brackets and align the round holes in the the End Trim with the installed cage nuts in the Tab.

DO NOT INSTALL ANY SCREWS AT THIS TIME.

(Screws get installed in Step 6. The End Trim is secured by being sandwiched between the PegBoard panel and the Mount Bracket)

Fig# 5

# PANEL INSTALLATION

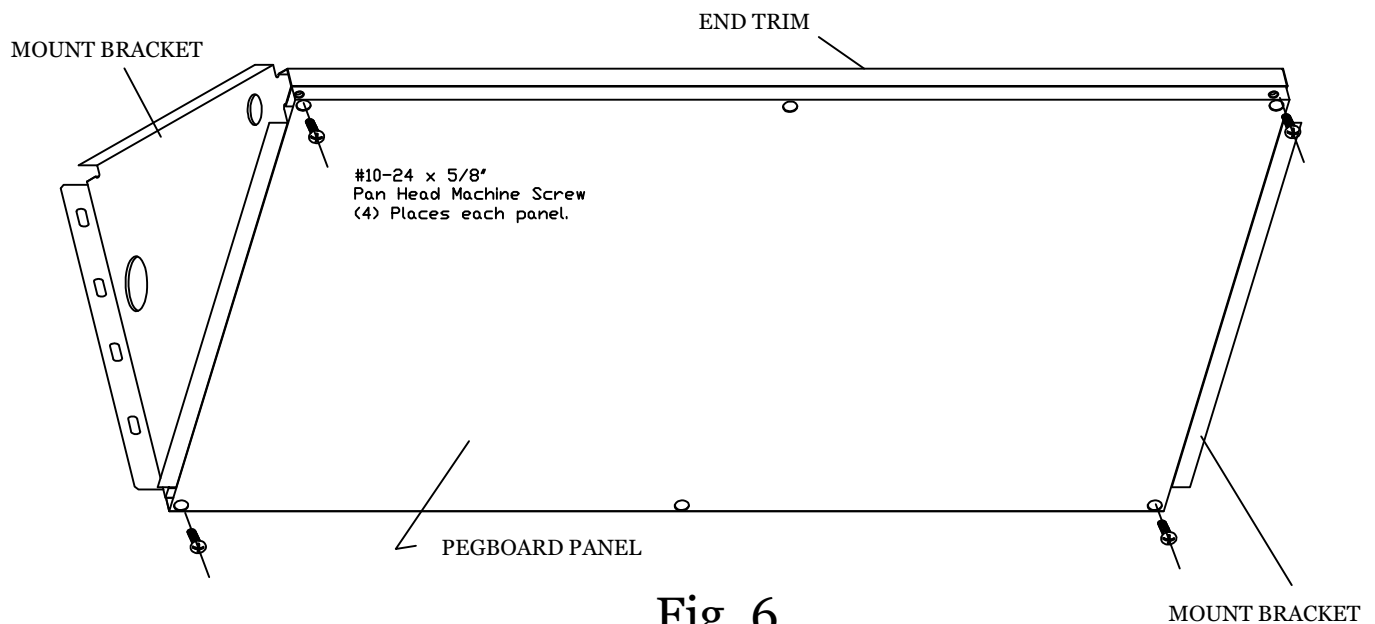


Fig. 6

## Step 6

Position Pegboard Panel against (4) mount Tabs on the V-Brackets. Pass (2) #10-24 x 5/8" machine screws thru the panel and End Trim on the upper two corners and loosely tighten.  
Pass (2) more #10-24 x 5/8" machine screws thru the other two corners and loosely tighten.  
Repeat Step 6 for other side of assembly.  
After all screws are installed they can be tightened.  
Fig# 6

**PEGBOARD PANELS ARE SOLD SEPARATELY**